

طريقة وضع اعدادات راوتر linkSys

نفتح صفحة انترنت و نكتب بالعنوان 192,168,1,1 .
نكتب

username: **admin**

password: **admin**



Connect to 192.168.1.1


ADSL Router

User name: admin

Password: admin

PalTem
www.paltem.ps

OK Cancel

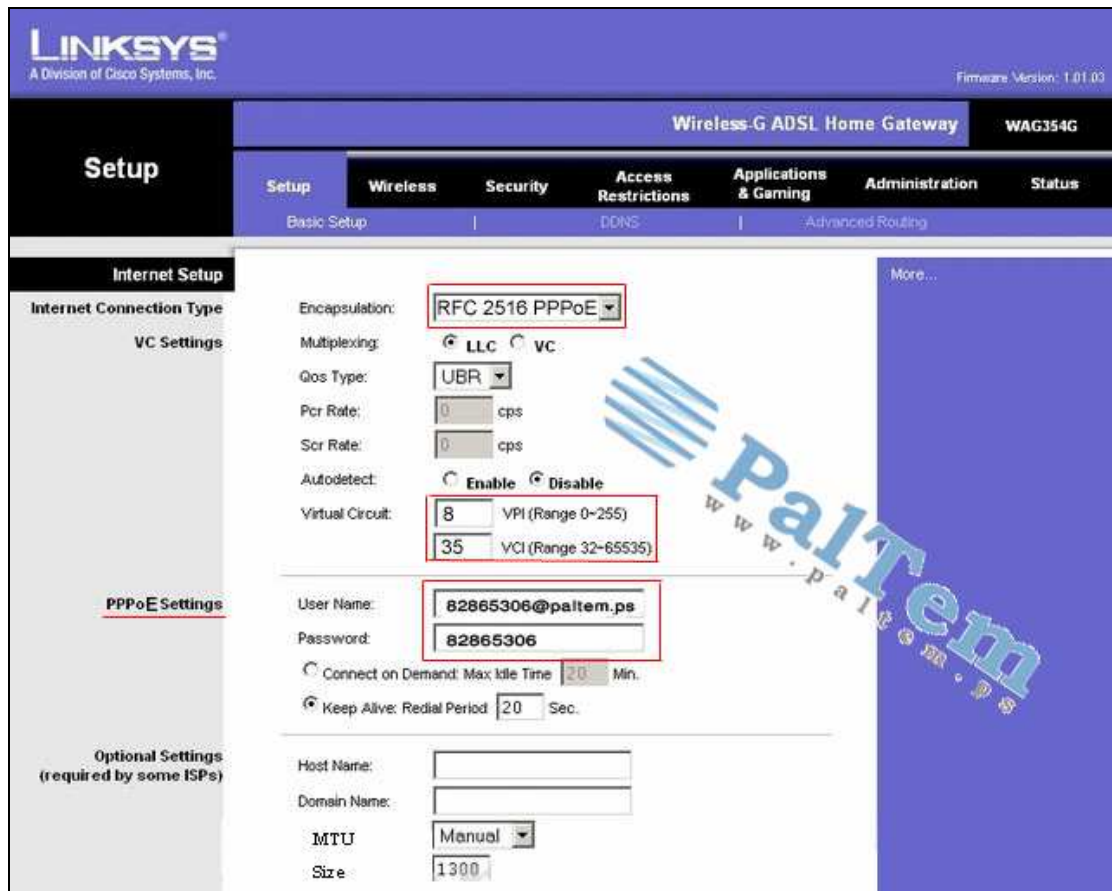

LINKSYS
A Division of Cisco Systems, Inc.

Firmware Version: 1.01.03

Wireless-G ADSL Home Gateway WAG354G

Setup

Setup Wireless Security Access Restrictions Applications & Gaming Administration Status

Basic Setup DDNS Advanced Routing

Internet Setup

Internet Connection Type

VC Settings

Encapsulation: RFC 2516 PPPoE

Multiplexing: LLC VC

Gos Type: UBR

Pcr Rate: 0 cps

Scr Rate: 0 cps

Autodetect: Enable Disable

Virtual Circuit: 8 VPI (Range 0-255)
35 VCI (Range 32-65535)

PPPoE Settings

User Name: 82865306@paltem.ps

Password: 82865306

Connect on Demand! Max Idle Time 20 Min.

Keep Alive: Redial Period 20 Sec.

Optional Settings (required by some ISPs)

Host Name:

Domain Name:

MTU: Manual

Size: 1300

PalTem
www.paltem.ps